 




## QUICK START GUIDE

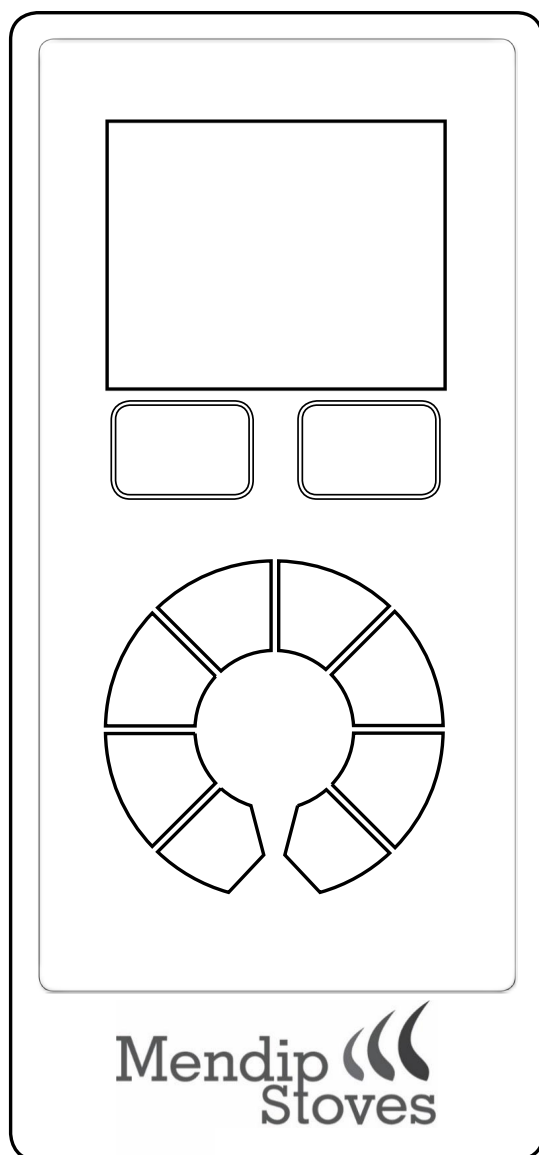

# WOODLAND ELECTRIC STOVE

# IMPORTANT

THIS DOCUMENT IS FOR STARTING  
GUIDELINES ONLY

PLEASE READ THE FULL INSTRUCTION  
MANUAL

THE HEATER OUTLET GRILLE BECOMES  
VERY HOT WHILST IN OPERATION.

DO NOT COVER THE OUTLET GRILLE OR  
ANY PART OF THE APPLIANCE.

FOR USE WITH 230V - 240V 50HZ  
ELECTRICITY SUPPLY ONLY.

PLEASE READ THE FULL INSTRUCTIONS  
CAREFULLY BEFORE INSTALLATION

KEEP THE INSTRUCTIONS IN A SAFE  
PLACE.

THEY WILL BE NEEDED WHEN  
MAINTENANCE OR SERVICING IS  
REQUIRED.

THIS APPLIANCE MUST BE EARTHED

THIS GUIDE COVERS THE FOLLOWING MODEL

**WOODLAND ELECTRIC**

## HOW TO USE YOUR APPLIANCE OPERATING INSTRUCTIONS

### - WARNING -

**PARTS OF THE PRODUCT MAY GET HOT  
DURING OPERATION**

TO TURN THE APPLIANCE ON I/O OPERATE THE  
STANDBY SWITCH LOCATED ON THE RIGHT HAND  
SIDE UNDER THE TOP PLATE AT THE BACK OF THE  
STOVE.

THE FLAME EFFECT CAN BE TURNED ON/OFF  
USING THE REMOTE. WHEN THE FLAME EFFECT IS  
OFF THE APPLIANCE REMAINS IN STANDBY.

THE APPLIANCE CAN BE OPERATED BY THE RADIO  
FREQUENCY HANDSET ONLY.

THE FOLLOWING FUNCTIONS CAN BE  
CONTROLLED USING THE REMOTE HANDSET:

- ON/OFF - FLAME EFFECT
- HEAT SETTINGS
- BRIGHTNESS OF THE FUEL AND FLAME  
EFFECT
- FLAME DUO COLOUR
- FUEL BED COLOUR
- THE FLAME EFFECT CAN BE TURNED OFF  
USING THE REMOTE,
- RETURNING THE APPLIANCE TO STANDBY.

### TURNING ON THE APPLIANCE

IF YOU DO NOT USE THE APPLIANCE AND  
HANDSET FOR 2 MINUTES THE HANDSET WILL GO  
WILL GO INTO SLEEP MODE. PRESS THE POWER  
BUTTON TO REACTIVATE.

TURN THE APPLIANCE ON AND OFF BY USING THE  
REMOTE HANDSET. PRESS THE POWER BUTTON  
TO EXIT SLEEP MODE. ONCE OUT OF SLEEP MODE  
PRESS THE POWER BUTTON AGAIN TO TURN ON.

# HOW TO USE YOUR APPLIANCE OPERATING INSTRUCTIONS

## TO ADJUST THE LIGHT EFFECT

SELECT 'EFFECT' SETTING WHILE IN LIGHT MODE.  
THE LH MENU BUTTON WILL SWITCH THE EFFECT ON.  
ROTATING THE DIAL OR PRESSING THE MENU BUTTONS WILL EXIT THE EFFECT MODE. THE EFFECT MODE IS INDICATED BY A DASHED BAR, THE LIGHT LEVEL IS INDICATED BY A SOLID BAR.

 
## TO ADJUST THE FUEL AND FLAME COLOUR

PRESS THE LH MENU BUTTON TO SELECT THE COLOUR OPTION





**CONTROLLING THE APPLIANCE**  
PRESS THE MENU BUTTONS TO SELECT THE MODES YOU WANT TO CONTROL  
HEAT - LIGHT - FLAME - EFFECT




**TO ADJUST THE FLAME BRIGHTNESS**  
ENSURE 'LIGHT' SETTING IS SELECTED.

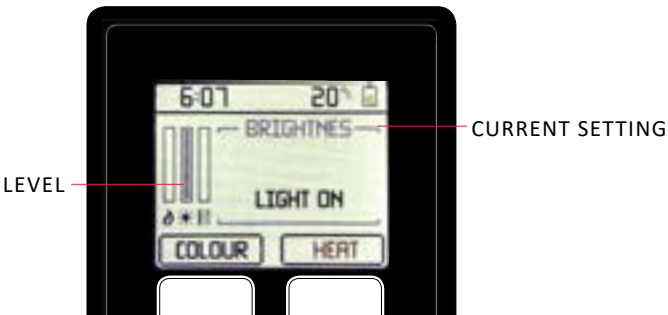

  ROTATE FINGER ON THE TOUCH DIAL  
ROTATE CLOCKWISE TO INCREASE  
ROTATE ANTI CLOCKWISE TO DECREASE

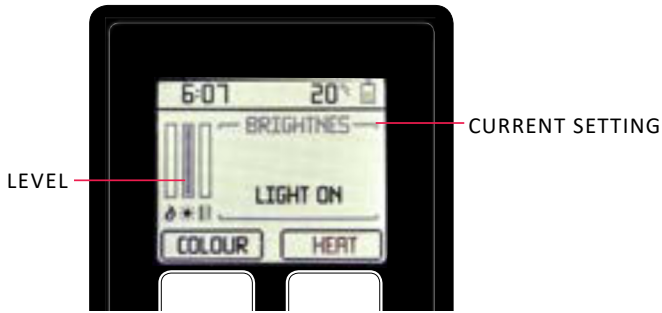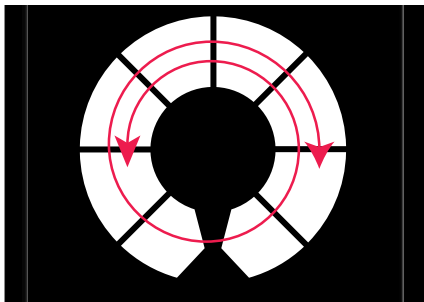


   ROTATE THE TOUCH DIAL TO CHOOSE YOUR COLOUR

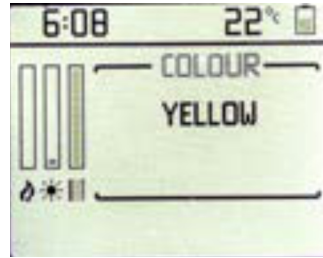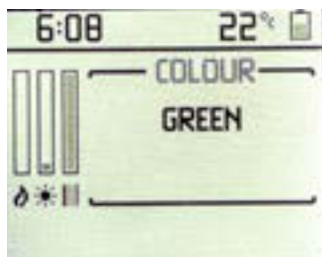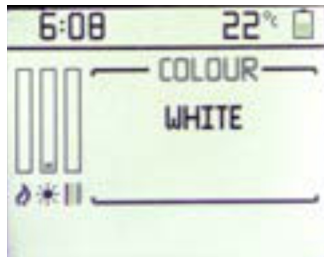


## HEAT SETTINGS

 PRESS THE RH MENU BUTTON TO SELECT THE HEAT CONTROL

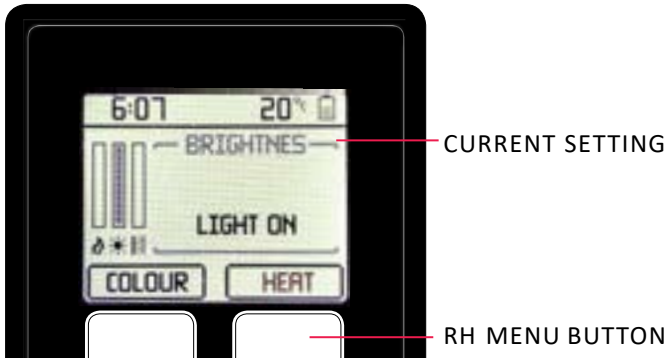

PRESS THE LH MENU BUTTON TO SWITCH BETWEEN THE 3 MODES:

 - MODE 1 MANUAL
- MODE 2 THERMOSTATIC
- MODE 3 7 DAY TIMER

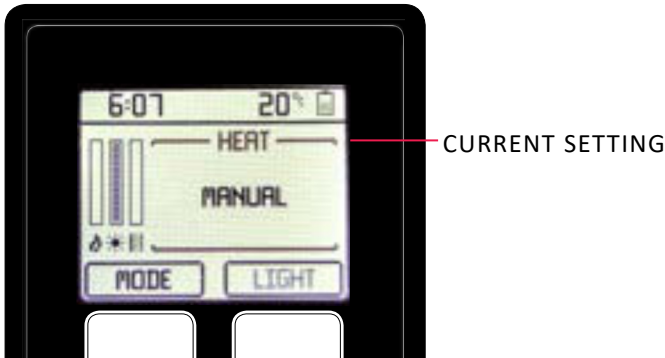

### MANUAL MODE

THE HEAT SETTING IS INDICATED BY A RED BAR.

ADJUST HEAT BY ROTATING FINGER ON THE TOUCH DIAL. CLOCKWISE INCREASES THE TEMPERATURE AND ANTI CLOCKWISE DECREASES THE TEMPERATURE UNTIL HEAT IS TURNED OFF.

### THERMOSTATIC MODE

WHEN SET IN THERMOSTATIC MODE JUST A TEMPERATURE IS DISPLAYED ON SCREEN.

ROTATE TOUCH DIAL CLOCKWISE TO INCREASE TEMPERATURE SETTING AND ANTI-CLOCKWISE TO DECREASE TEMPERATURE SETTING. THE HEATER WILL AUTOMATICALLY MAINTAIN THE SET TEMPERATURE.

### 7 DAY TIMER

IN 7 DAY TIMER MODE THE CURRENT TEMPERATURE AND THE NEXT TIME AND TEMPERATURE , IS DISPLAYED, SEE MENU SETTINGS.

## MENDIP STOVES

Unit H1

Mendip Industrial Estate. Mendip Road

Rooksbridge, Somerset. BS26 2UG

 
Tel. : +44 (0) 1934 750500

Web : [www.mendipstoves.co.uk](http://www.mendipstoves.co.uk)

Email : [info@eurostove.co.uk](mailto:info@eurostove.co.uk)



Mendip Stoves



0691046768162