


OPERATION AND INSTALLATION MANUAL

Woodland Electric

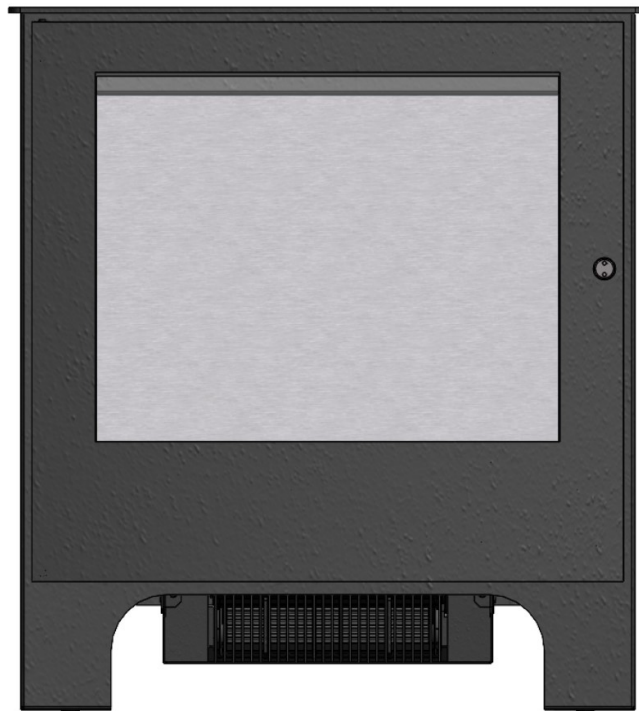

THE HEATER OUTLET GRILLE BECOMES VERY HOT WHILST IN OPERATION.

DO NOT COVER THE OUTLET GRILLE OR ANY PART OF THE APPLIANCE.

FOR USE WITH 230V - 240V 50HZ ELECTRICITY SUPPLY ONLY.

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION.

KEEP THE INSTRUCTIONS IN A SAFE PLACE.

THEY WILL BE NEEDED WHEN MAINTENANCE OR SERVICING IS REQUIRED.

THIS APPLIANCE MUST BE EARTHED.

Users Manual Contents

Section 1:	Important Safety Information	2/4
Section 2:	Operating Instructions	5/9
Section 3:	Maintenance and Care	10/11
Section 4:.	Technical Data	12
Section 5:	General Installation	12
Section 6:	Positioning your appliance	13
Section 7.	Setting the Fuel Bed	14
Section 8:	Electrical Connection	15
Section 9:	Servicing Instructions: General Information	15
Section 10:	Servicing Instructions: Fault Finding	16
Section 11:	Servicing Instructions: Servicing Requirements	16/17
Section 12:	Servicing Instructions: Replacing Fuel Bed LEDS	18
Section 13:	Servicing Instructions: Replacing Fuel Bed LEDS	19
Section 14:	Servicing Instructions: Replacing the Power Plate Assembly	19
Section 15:	Servicing Instructions: Removing the inner screen assembly	20
Section 16.	Servicing Instructions: Removing the Heater Assembly	20
Section 17.	Servicing Instructions: Removing the Heater Assembly	21

Mendip Stoves Warranty

Each Mendip stove is designed and built with great care, using quality materials. Ensuring the quality of our product is an integral part of the production process. Your stove comes with a 1 year warranty on manufacturing defects; this can be extended to 5 years against manufacturing defects with the body of the stove, all electrical components will have an extended warranty of 2 years. If your stove is purchased through a registered Mendip Stoves retailer and the 5 year and 2 year extended warranty will only apply if we have received the completed registration card within 1 calendar month of the purchase of your appliance.

Register online today to activate warranty: www.mendipstoves.co.uk/SIT/StoveRegistration

Please see the Warranty Card for the complete terms and conditions.

HOW TO USE YOUR APPLIANCE

1. IMPORTANT SAFETY INFORMATION

READ ALL OF THE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE.

Instructions are available online at: www.eurostove.co.uk

REMOVE ALL PACKAGING AND DISPOSE OF AT AN APPROPRIATE RECYCLING FACILITY.

DO NOT LOCATE THIS APPLIANCE IMMEDIATELY BELOW A FIXED SOCKET

DO NOT USE THIS APPLIANCE IN THE IMMEDIATE SURROUNDINGS OF A BATH, SHOWER, SWIMMING POOL OR ANY OTHER AREA WHERE THE APPLIANCE COULD COME INTO CONTACT WITH WATER OR HUMIDITY, FOR EXAMPLE A BATHROOM.

DO NOT ALLOW THE APPLIANCE TO BE COVERED OR LET THE AIR INLET/OUTLET BECOME OBSTRUCTED AS THE APPLIANCE MAY OVERHEAT. PLEASE NOTE THE WARNING SYMBOL ON THE APPLIANCE.

FOR INDOOR USE ONLY. THIS APPLIANCE IS NOT SUITABLE FOR USE OUTSIDE THE HOUSE.

KEEP THE POWER CORD AWAY FROM HOT SURFACES AND HOT CONDITIONS. DO NOT ROUTE THE POWER LEAD IN FRONT OF THE APPLIANCE.

ENSURE THE APPLIANCE IS LEVEL AND THAT FURNITURE, CURTAINS ETC. ARE POSITIONED NO CLOSER THAN 1M.

WHEN THE APPLIANCE HAS BEEN INSTALLED THE POSITION OF THE PLUG MUST BE ACCESSIBLE OR AN ISOLATION SWITCH WILL BE INSTALLED AWAY FROM THE APPLIANCE.

WHERE THE ELECTRICITY SUPPLY CABLE HAS TO PASS THROUGH A MASONRY WALL, STONE SURROUND ETC. ENSURE SUITABLE RUBBER BUSHES ARE FITTED AT POSSIBLE WEAR POINTS.

IF THE ELECTRICITY SUPPLY CABLE IS DAMAGED DO NOT USE THE APPLIANCE UNTIL IT HAS BEEN REPLACED. FOR SAFETY REASONS THE REPLACEMENT HAS TO BE CARRIED OUT BY A SERVICE AGENT OR A SIMILARLY COMPETENT ELECTRICIAN.

CAUTION: IN ORDER TO AVOID A HAZARD DUE TO INADVERTENT RESETTING OF THE THERMAL CUT OUT, THIS APPLIANCE MUST NOT BE SUPPLIED THROUGH AN EXTERNAL SWITCHING DEVICE, SUCH AS A TIMER, OR CONNECTED TO A CIRCUIT THAT IS REGULARLY SWITCHED ON AND OFF BY THE UTILITY.

DO NOT OPERATE THE APPLIANCE IF IT IS DAMAGED.

REPAIRS OF ELECTRICAL APPLIANCES MUST ONLY BE PERFORMED BY AN ELECTRICAL ENGINEER. SHOULD THE APPLIANCE FAIL TO OPERATE, OR IN CASE OF ANY DAMAGE, PLEASE CONTACT THE RETAILER FROM WHOM THE APPLIANCE WAS PURCHASED.

ENSURE THE FLOOR AREA THE STOVE WILL SIT ON IS FLAT AND FREE FROM LOOSE MATERIAL.

CAUTION: SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION MUST BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.

CHILDREN AGED 8 YEARS OR OLDER SHALL ONLY SWITCH ON/ OFF THE APPLIANCE PROVIDED THAT IT HAS BEEN PLACED OR INSTALLED IN ITS INTENDED NORMAL OPERATING POSITION AND THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED.

CHILDREN AGED LESS THAN 8 YEARS SHALL NOT PLUG IN, REGULATE AND CLEAN THE APPLIANCE OR PERFORM USER MAINTENANCE.

- NEVER LEAVE CHILDREN UNSUPERVISED WITH AN UNGUARDED HEATER.

The use a fireguard to BS 8423:2002 in the presence of children, aged and/or infirm persons is essential for their safety, even when the stove is not in use. The glass on the stove is safety glass however a hard impact could cause the glass to break.

- NEVER OBSTRUCT OR COVER THE HEATER OUTLET.
- NEVER INSTALL OR USE THIS PRODUCT WHERE IT MAY COME IN CONTACT WITH WATER I.E. A BATHROOM OR WET ROOM.
- NEVER USE AEROSOLS OR STEAM CLEANERS NEAR THIS PRODUCT.
- NEVER ROUTE THE ELECTRIC CABLE NEAR THE HEATER OUTLET.
- NEVER ROUTE THE ELECTRIC CABLE UNDER CARPETS OR FLOOR COVERINGS.
- NEVER INSTALL THIS PRODUCT CLOSE TO CURTAINS OR COMBUSTIBLE MATERIALS.
- NEVER USE THE HEATER TO DRY CLOTHES OR OTHER OBJECTS.
- NEVER MOVE THE STOVE WITHOUT ISOLATING THE ELECTRIC SUPPLY.

PAIRING THE REMOTE TO THE APPLIANCE

To pair a handset (existing or new) to the appliance the current pairing program must be deleted.

TO DELETE THE HANDSET:

- Access menu by holding both menu buttons. Scroll to device menu and press select.
- This gives details of the appliance and also gives the option to delete the appliance from the remote handset. Press and hold the delete option until the bar is filled to remove the handset.

PAIRING REMOTE TO APPLIANCE:

- Ensure appliance is switched off using switch located on the rear of the stove just under the top plate on the right hand side.
- Touch power button on the remote to bring up the pairing options.
- Touch pair on remote.
- Switch on appliance using switch located on the rear of the stove just under the top plate on the right hand side. The remote screen will show standby when successfully paired.

2. OPERATING INSTRUCTIONS

WARNING: Parts of the stove may get hot during operation

To turn the appliance on I/O operate the standby switch located on the rear of the stove just under the top plate on the right hand side.

The flame effect can be turned on/off using the remote. When the flame effect is off the appliance remains in standby. The appliance can be only operated by the radio frequency handset.

THE FOLLOWING FUNCTIONS CAN BE CONTROLLED USING THE REMOTE HANDSET:

- ON/OFF- FLAME EFFECT
- HEAT SETTINGS
- BRIGHTNESS OF THE FUEL AND FLAME EFFECT
- FLAME DUO COLOUR
- FUEL BED COLOUR
- THE FLAME EFFECT CAN BE TURNED OFF USING THE REMOTE,
- RETURNING THE APPLIANCE TO STANDBY.

TURNING ON THE APPLIANCE

If you do not use the appliance and handset for 2 minutes the handset will go into sleep mode.

Press the power button to reactivate.

Turn the appliance on and off by using the remote handset. Press the power button to exit sleep mode. once out of sleep mode press the power button again to turn on.



CONTROLLING THE APPLIANCE

Press the menu buttons to select the modes you want to control

HEAT - LIGHT - FLAME - EFFECT

TO ADJUST THE FLAME BRIGHTNESS

Ensure 'light' setting is selected.

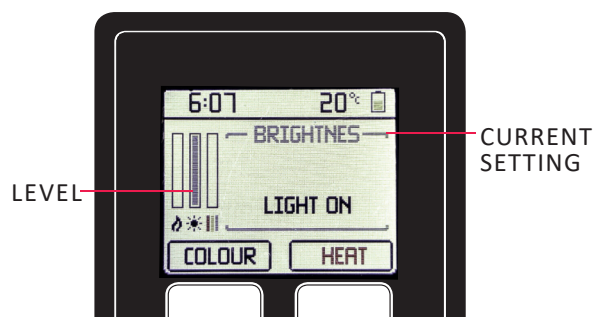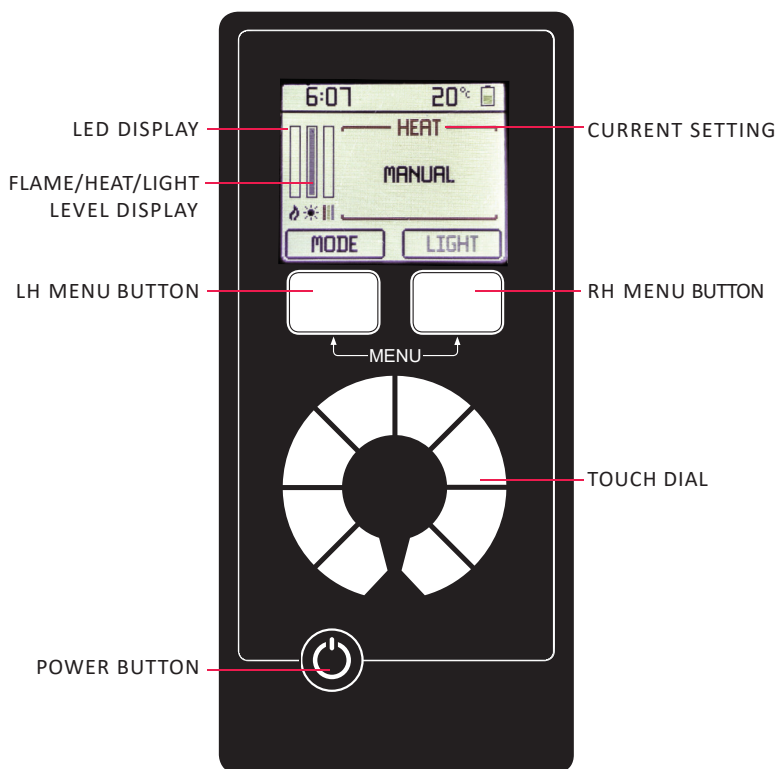

ROTATE FINGER ON THE TOUCH DIAL
ROTATE CLOCKWISE TO INCREASE
ROTATE ANTI CLOCKWISE TO DECREASE




TO ADJUST THE LIGHT EFFECT

Select 'effect' setting while in light mode.

The LH menu button will switch the effect on.





Rotating the dial or pressing the menu buttons will exit the effect mode. the effect mode is indicated by a dashed bar, the light level is indicated by a solid bar.

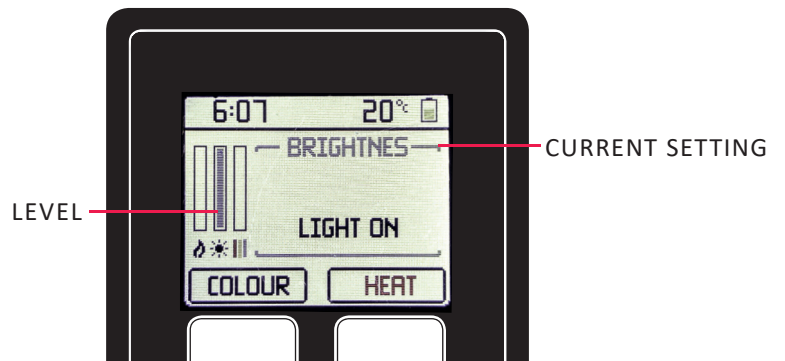

TO ADJUST THE FUEL AND FLAME COLOUR


Press the LH menu button to select the colour option.

ROTATE THE TOUCH DIAL TO CHOOSE YOUR COLOUR

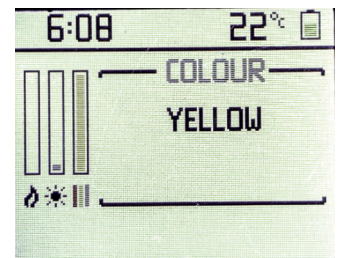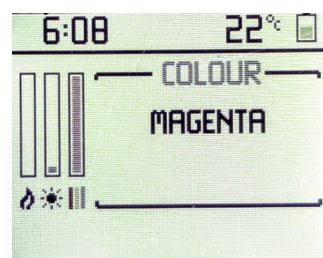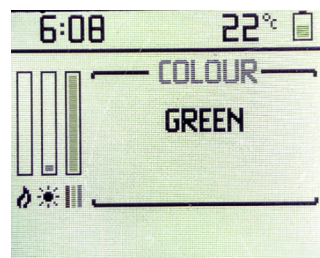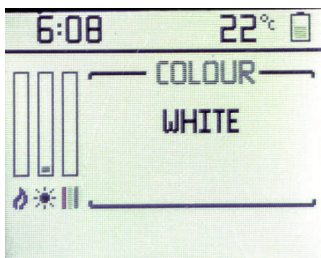


HEAT SETTINGS

Press the RH menu button to select the heat control.

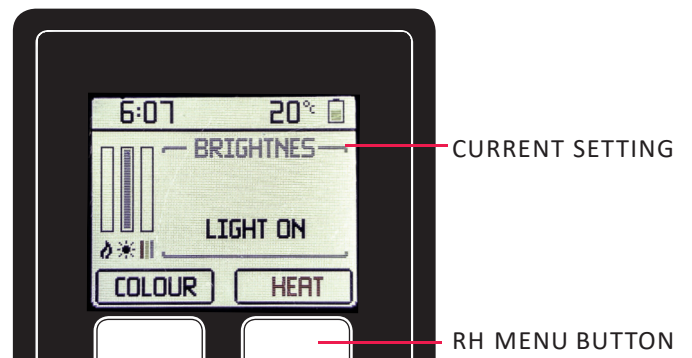

Press the LH menu button to switch between the 3 modes:

- MODE 1 MANUAL
- MODE 2 THERMOSTATIC
- MODE 3 7 DAY TIMER

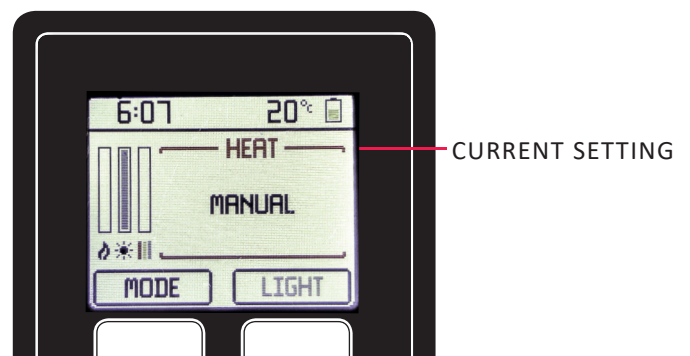

MANUAL MODE

The heat setting is indicated by a red bar.

adjust heat by rotating finger on the touch dial. clockwise increases the temperature and anti clockwise decreases the temperature until heat is turned off.

THERMOSTATIC MODE

When set in thermostatic mode just a temperature is displayed on screen.

Rotate touch dial clockwise to increase temperature setting and anti-clockwise to decrease temperature setting. The heater will automatically maintain the set temperature.


7 DAY TIMER

In 7 day timer mode the current temperature and the next time and temperature, is displayed, see menu settings.

MENU SETTINGS


Press both menu buttons until a menu appears at top of screen.
4 screen options will appear.

To select options rotate dial until highlighted in red and press select.

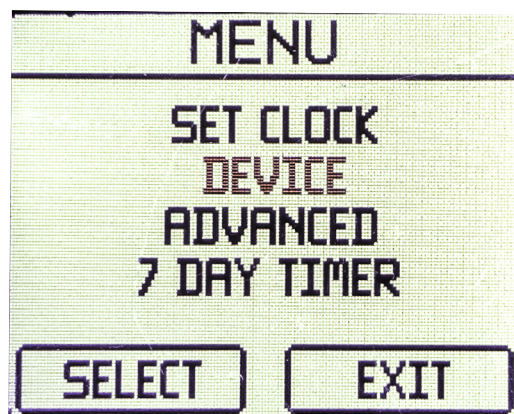

SET THE CLOCK


Select clock in the option menu and rotate touch dial until desired time is displayed.

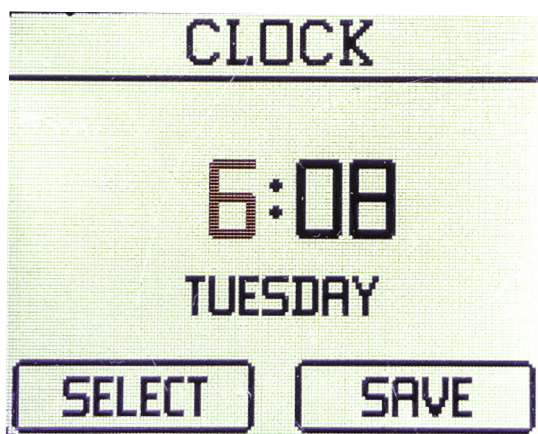

By pressing select it changes from hours, minutes and days.
When correct time has been set press the RH menu button to save.

ADVANCED

Used to turn on or off the dimmer, 7 day timer, and adaptive heat functions.

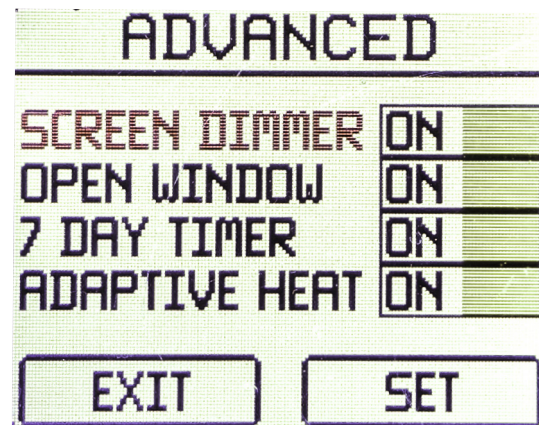

7 DAY TIMER

Used to set the 7 day timer.

TO SET THE 7 DAY TIMER:

Rotate the touch dial and press the LH menu button to select the desired day (highlighted in red).

Use the touch dial to alter the selected heating period (available in 10 minute increments).

Press the LH menu button again to set the time and use the touch dial to alter the selected temperature.

Press the LH menu button to set the temperature.

Repeat for remaining heating periods.

Once completed, press the LH menu button to confirm heating periods for that day. the day will be highlighted in red.

Use the touch dial to select the next day you wish change. Press the LH Menu button to apply a new set of heating periods. press the RH menu button to copy the same settings entered for the previous day.

NOTE: PRESSING THE RH MENU BUTTON WILL AUTOMATICALLY ADVANCE THE 7 DAY TIMER MENU 1 DAY.

Once settings for all 7 days have been entered, rotate the touch dial to move beyond Sunday until the prompt to save and exit appears. Use the LH menu button to select save and exit.

OTHER ADVANCED FUNCTIONS

DIMMER

This function dims the screen of the handset. To dim or lighten the screen press both menu buttons until the menu option appears. Press hold the power button at any time whilst in the menu.

To enable or disable the dimmer function enter the menu function and select the dimmer option and press set.

ADAPTIVE HEAT

If switched on the appliance saves power by predetermining the optimum time to switch on the heat and the level of heating required to reach a preset temperature at a chosen time.


This function only works within the 7 day timer mode.

THE REMOTE CONTROL WORKS BY RADIO SIGNAL.

THE HAND-HELD TRANSMITTER IS CONFIGURED IN THE FACTORY WITH A UNIQUE SIGNAL CODE.

ADJUST THE FLAME SPEED


To access the flame speed controls navigate to the flame colour options.
Then press and hold the LH menu button for 5 seconds.

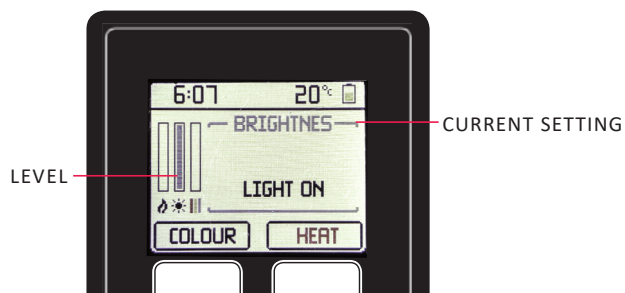


Then press and hold the LH menu button for 5 seconds.



The LH menu button will change to purple.

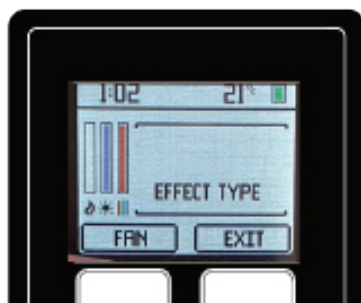

Press the LH menu button and the screen will show Effect Type.

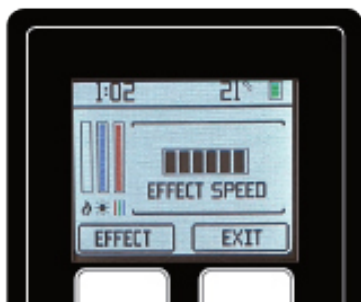

Press the LH menu button to select fan and rotate the touch dial to adjust the flame speed.

THERMAL SAFETY CUT OUT

If the safety cut out for the heater trips the appliance has overheated.

If this happens:

- Unplug the device and allow it to cool down for a minimum of 2 hours.
- Check the heater outlet vents for obstruction and clear if necessary. See maintenance section for guidance.
- Plug in the appliance and switch it on. the cut out will reset and the appliance should function normally.
- If the appliance continues to not function correctly, contact the retailer or place of purchase.

3. MAINTENANCE AND CARE

The air inlet grilles on the underside of the appliance should be unobstructed. Free air needs to circulate in this area.

Always unplug the appliance from the mains supply before cleaning or undertaking any maintenance.

GENERAL CLEANING

- Only clean the glass when its cold.
- Do not use abrasive cleaners on any part of the appliance.
- Use a lint free cloth to wipe any surfaces.
- **DO NOT** spray cleaner into the appliance.

CLEANING THE FUEL BED

To access the fuel effect it will be necessary to open the front door by turning the handle and pulling the door open. Due to the weight of the door it may need to be supported from below whilst cleaning the fuel effect.

- Ensure the appliance is unplugged.
- Remove the logs and dust clean. **DO NOT WET THE LOGS.**
- Use a lint free duster or soft paintbrush.
- Lift all fuel medium out of the fire and wipe fuel bed down.
- Ensure no moisture remains before returning the logs into position. See log installation process.
- Once cleaned, close the door securely.

CLEANING THE OUTLETS


The area around the fire should be kept free of any materials such as lint or house dust (i.e. animal hair/carpet fibres) that could be drawn into the internal workings of the appliance and hence affect the performance. We recommend that you clean around the fan grille housing at regular intervals.

- Ensure the appliance is unplugged.
- Clean the fan air outlet grilles regularly with a soft cloth or the nozzle of a vacuum cleaner.
- Dust build-up can inhibit efficient performance of the fan and lead to the safety cut-out operating.

BATTERY REPLACEMENT

When the remote batteries is low it must be changed immediately. Install correct replacements and dispose of the old batteries carefully.

The remote requires 4 x 1.5V alkaline AAA batteries.

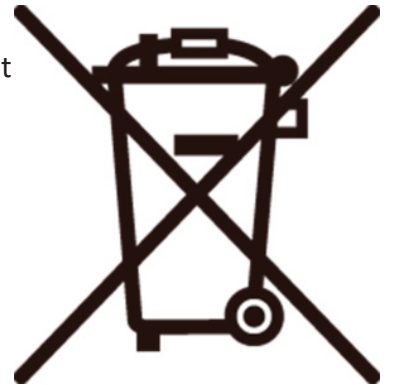

4. TECHNICAL SPECIFICATION

Model		Woodland
Weight Kg		40 approx
Voltage		230V 50Hz
Battery handset transmitter		12 V MN 21/23
Electrical power consumption	Flame picture only	15W
	Heating on	2000W
Supply cord		BS1363 UK13A

THIS APPLIANCE MUST BE EARTHED

This appliance has been certified for use in countries other than those stated. To install this appliance in these countries, it is essential to obtain the translated instructions and in some cases the appliance will require modification. Contact your retailer for further information.

5. GENERAL INSTALLATION

IT IS VERY IMPORTANT THAT THE AIR INLET GRILLES ON THE UNDERSIDE OF THE APPLIANCE ARE UNOBSTRUCTED AND ADEQUATE SPACE IS LEFT TO ALLOW FREE CIRCULATION OF AIR AROUND THIS AREA.

UNPACKING THE STOVE

WARNING! Do not use this appliance if any part has been exposed to water.

Immediately call a qualified service technician to inspect and to replace any part of the electrical system if necessary.

- Carefully unpack the appliance. Take care not to damage the surface of the appliance or the installation area. Keep plastic wrapping away from children. Be responsible when handling the packing materials.
- Check all parts and accessories are removed before disposing of any packaging.
- If necessary keep the original packaging for future transport and/ or storage.

Take care when lifting the appliance, obtain assistance if required and always follow safe manual handling techniques.

WHEN IN DOUBT CONSULT YOUR RETAILER OR SUITABLY QUALIFIED PERSON.

6. POSITIONING YOUR APPLIANCE

- Your new appliance may be installed virtually anywhere in your home, however, when choosing a location ensure that the general instructions are followed.
- The positioning of the appliance should ideally be fitted in front of a flat wall of block/brick construction or an internal wooden frame plaster board wall.
- Always ensure the appliance is adequately supported and sits on a firm structure.
- The appliance should be located on a flat floor or surface.
- If the electricity supply cable is damaged do not use the appliance until it has been replaced.
- Ensure that curtains and furniture are not positioned close to the chosen position, as this would create a potential fire hazard or block the heater outlet ducts.
- For best results, install out of direct sunlight.
- The appliance should ideally be located close to a suitable mains socket to enable connection.
- The electrical socket must be easily accessible to allow disconnection after the appliance is fitted.
- Warning! if the electrical socket is not accessible once the appliance has been installed then a qualified electrician will need to install an isolation switch.
- **WARNING!** Keep any furnishings or combustible materials at least 1m from the front of the electric stove.

7. SETTING THE FUEL BED

- Unpack the box of logs provided. the logs are made from ceramic and are fragile.

PLEASE HANDLE THE LOGS WITH CARE.

- Supplied with the logs will be a bag of loose fuel bed material. Spread this over the fuel bed in an even layer. Be carefully not to allow any of the material to drop into the appliance.
- To access the log fuel bed the stove door needs to be opened. Turn the door handle and swing the door open gently. Due to the weight of the door it may need to be supported from below whilst fitting the fuel effect.



8. ELECTRICAL CONNECTION

CONNECTING TO MAINS SUPPLY

- Check whether the mains supply can accommodate the additional load of 2000 WATT
- Connect the provided IEC power cord to the appliance.
- Connect the power cable to an earthed socket.
- Do not clamp the power cord or secure it to any fixture point.
- Only use the power cable provided with your appliance as it will be correct for your region.

SERVICING INSTRUCTIONS

9. GENERAL INFORMATION

This appliance must only be serviced by a suitably qualified person.

Before undertaking any work on the appliance: switch off the appliance and isolate it from the mains by unplugging the unit.

Wait for at least 10 minutes until the appliance has cooled down.

REMOTE HANDSET BATTERY REPLACEMENT

The remote control handset, uses 4 X AAA batteries for power operation, these will need replacing over a period of time.

FOR REPLACEMENT:

- Open the battery compartment cover on the rear of the handset.
- Remove the old batteries and replace observing the correct polarity (+ & -) as marked upon the batteries and handset remote control.
- Replace the handset cover.

MAINTENANCE OF MOTORS

The motors used on the fan and flame effect are pre-lubricated for extended bearing life and require no further lubrication, however, periodic cleaning/ vacuum of the fan/heater unit is recommended.

The appliance is fitted with an electronic safety control (e.s.). this is a safety device which switches off the heat only if, the appliance overheats for any reason e.g. when covered.

If the heater stops operating whilst the flame effect continues normally, this indicates that the e.s. control is in operation. The E.S. control can only be re-set after the appliance has cooled down.

TO RE-SET THE E.S:

- Switch off the appliance (isolation switch) and leave for up to 2 hours.
- Remove any obstruction to the fan heater outlet or other internal parts.
- Switch on appliance and the E.S. Control will re-set.
- Ensure that the appliance is functioning correctly. If the E.S. Control operates again, the appliance should be checked by a competent electrician.

If the power supply is interrupted (POWER FAILURE) or the appliance is turned off at the isolation switch whilst the heater is on, it will be necessary to disconnect the appliance from the mains supply and leave for 5 minutes in order to discharge the electronics before attempting to turn the appliance on.

SERVICING INSTRUCTIONS

10. FAULT FINDING

OPERATE APPLIANCE BEFORE COMMISSIONING

1. Click on the remote handset power button. if the appliance does not function, then, follow points 1, 2, 3, 4 and 5 respectively.
2. Check the power connection to the mains switch on the wall is in the on position.
3. Check the isolation switch on the appliance (see sticker on the appliance). the switch must be set to the "I" position
4. Check the batteries in your handset. Check if the batteries are in the correct position and refit if necessary.
5. if after checking 1, 2, 3 still nothing happens, then it may be necessary to re-pair the handset to the appliance, see servicing section.
6. If after checking 1, 2, 3 & 4 nothing still has happened, then disconnect the power from the mains (unplug from socket), and wait for 60 seconds, then plug it back in and repeat steps 1 to 4. If you do not have access to the mains switch, because it is built-in, then disconnect from the fuse board.
7. On cold days or if the appliance is fitted in a conservatory, the flame effect may move slowly (or appear to stick slightly), when you first start it. Turn on the heating by clicking on the bottom button for few minutes. this will generate a stronger pull and will warm up the glass.

FAULT: The heating does not turn-on when you select heating mode but the flame effect is running.

- A) Check the batteries in your hand set. The red led must be showing brightly.
- B) Try selecting heating mode again, but closer to the appliance.
- C). Turn off appliance, then turn it on again, wait for 10 seconds, then select heating mode again.
- D). If after checking a, b & c the heating still does not turn on then follow point number 5.

SERVICING INSTRUCTIONS

11. SERVICING REQUIREMENTS

TO SERVICE THE APPLIANCE PLEASE FOLLOW THE STEPS AS DETAILED:

1. Turn on the flame effect. If appliance does not work, then follow the fault finding guide.
2. If it works then operate heat setting at various levels.
3. Turn on the effect mode for the flames, make sure the flame effect goes from max brightness to a minimum and then start cycling up and down.
4. If steps 2 & 3 are ok, then use your handset to turn off the heat, turn off effect mode and turn off the fire.
5. Turn off the switch on the fire.
6. The isolation switch on the appliance must be set to the "O" position.
7. Turn off power connection mains switch on the wall to off position. if you do not have an access to the mains on/off switch, because it is built-in, then disconnect from mains fuse board.

ONCE THESE STEPS HAVE BEEN FOLLOWED:

8. Change the batteries in the hand set.
9. Open the door of the stove.
10. Gently remove the fuel effects and clean the plate on which it sits with screen cleaner.
11. Wipe and clean the back screen of the fire, with screen cleaner and cloth and wait about 2 minutes to dry.

1. Spray anti static on the back of the fire behind the screen and on the silk.
2. Attach the silk and clip back into its original position.
3. Clean the effects screen and outer screen with screen cleaner and cloth.
4. Clean the glass with glass cleaner and cloth.
5. Connect /restore mains electricity and on/off switch back-to 1 position.
6. Run the fire while the screen is unattached following
7. Steps 1, 2 and 3, for 5 minutes.
8. Turn off the fire from your handset.
9. Attach screen.
10. Run the fire while the screen and door closed following steps 4.2.1, 4.2.2 and 4.2.3, for 3 minutes.

CLEANING

DO NOT use water, detergents, abrasive cleaning powders or polish of any kind on the body of the appliance, lightly dust using a dry duster or a medium soft brush.

To clean the glass use glass or window cleaner.

SERVICING INSTRUCTIONS

ONLY TO BE UNDERTAKEN BY A TRAINED AND COMPETENT ELECTRICAL ENGINEER.

To gain access to the unit for servicing the complete assembly needs to be removed from the body of the stove.


- 1) Disconnect the stove from the power supply, removing the power cable from the rear of the stove.
- 2) Open the door, this may need to be supported from underneath due to its weight to stop the stove falling forwards.
- 3) Remove all the fuel effect from the stove, clean if necessary.
- 4) Locate the 4 x 13mm nuts in the top of the stove which hold the top plate to the body and remove these. Then lift the top plate from the body. This exposes the LED Driver and printed circuit board. The ON/OFF switch can be replaced if required at this stage.
- 5) Remove the 12 Phillips screws and 2 holding brackets from the rear of the stove.
- 6) Remove the 10 Allen head screws from the front panel.
- 7) The whole unit can now be lifted from the body. This may require 2 people due to the weight.
- 8) To replace, reverse the steps 1 to 7.



SERVICING INSTRUCTIONS

12. REPLACING FUEL BED LEDS


- To access the fuel bed LEDS, open the door on the stove
- Remove any fuel effect material carefully, and set aside.
- **NOTE:** The complete assembly must be removed from the body, see previous section page 17.
- To replace the fuel bed led strip. Unclip the saddle clamps. B
- Remove the led strip terminals from the cable block using a small screwdriver. C
- Slide to led strip out of the fuel bed plate. A
- When installing a new led strip, follow these steps in reverse, ensuring the wiring is installed as shown on the diagram on page 19.

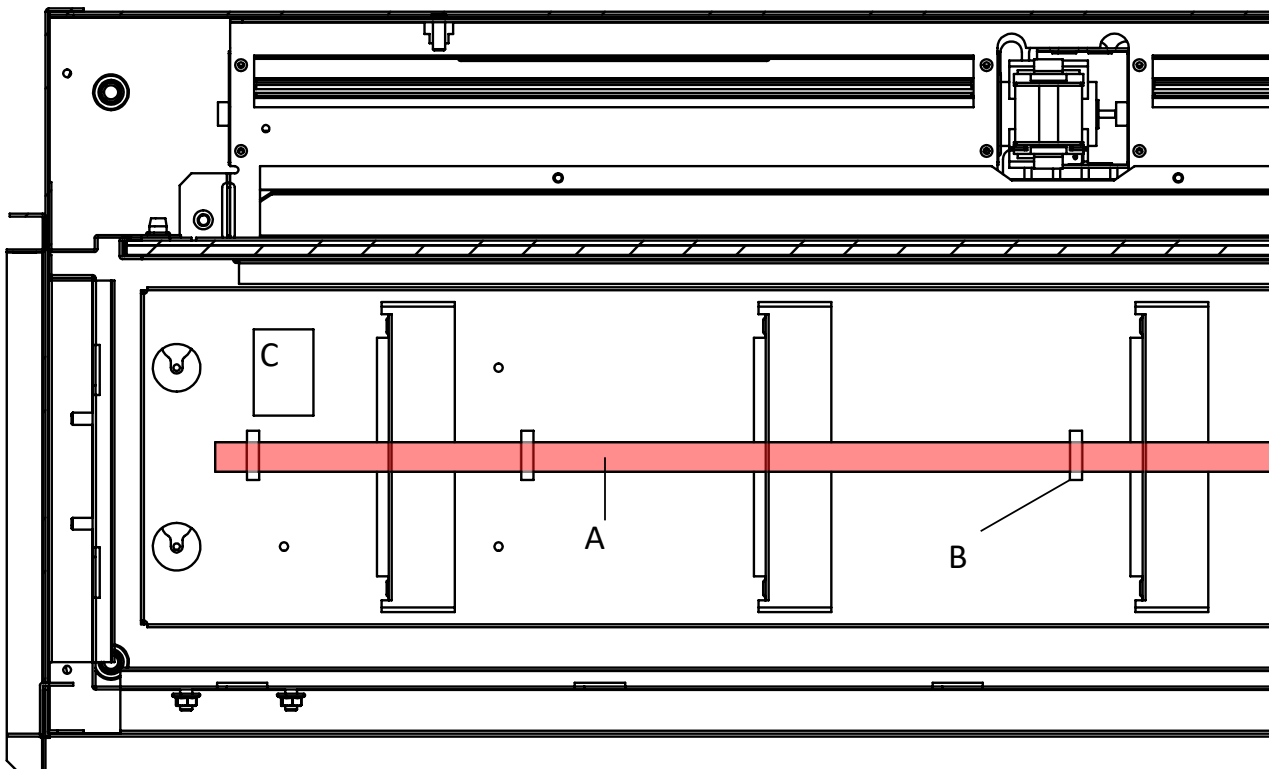

SERVICING INSTRUCTIONS

13. REPLACING FUEL BED LEDS

FUEL BED LED WIRING BLOCK DIAGRAM

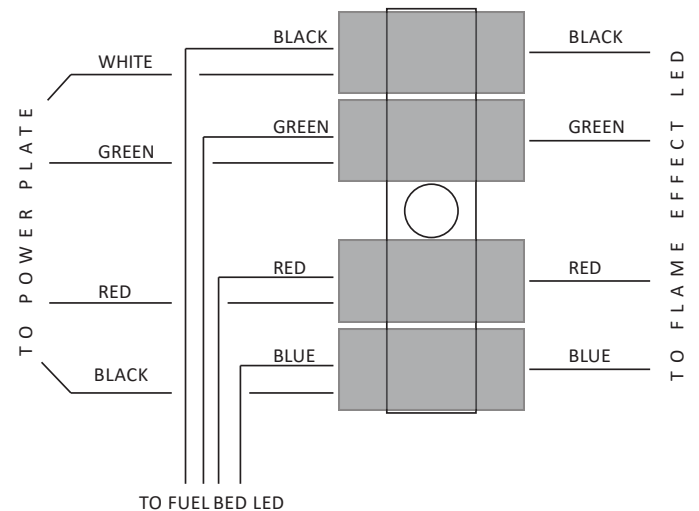


SERVICING INSTRUCTIONS

14. REPLACING THE POWER PLATE ASSEMBLY


The power plate assembly within the appliance, holds key electrical components. If any element of this assembly has failed please swap the assembly out following the instructions below.

REMOVING THE FUEL BED PLATE

- Open the stoves door and fuel effect then remove the complete unit from the body of the stove as noted on page 17.
- Loosen the 4 screws in these locations. Do not remove the screws.
Once the screws are loose you can pull the fuel bed plate towards the front of the appliance and then lift up.

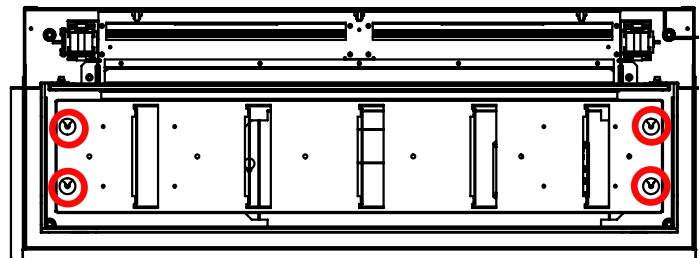

- The led cable linking the fuel bed plate can remain attached. Ensure you rotate the fuel bed plate out of the appliance and set aside ensuring no tension is applied to the led cable.
- Once the fuel bed plate is away from the appliance you can gain access to the power plate assembly.
- Loosen the 2 screws in this location.

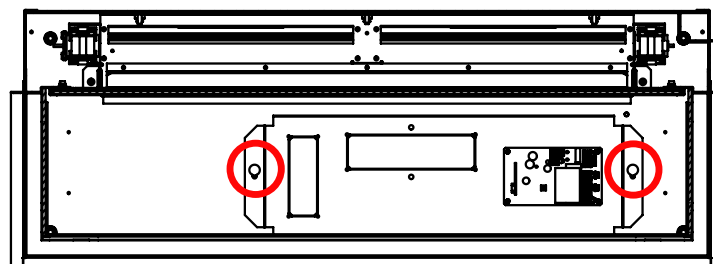


- With the power plate ready to be removed, disconnect the harness for the led connections.
- Disconnect the cables from the main PCB
- Remove the power place assembly
- When installing a replacement follow these steps in reverse.
- Ensure all wiring is returned to its original location following the wiring diagram located on page 19.
- Once a replacement assembly has been installed recheck all wiring is in its correct location and test the

SERVICING INSTRUCTIONS

16. REMOVING THE INNER SCREEN ASSEMBLY

- To remove the inner screen assembly locate the 4 fixing points.
- Remove the 4 retaining screws.
- Lift the screen assembly and pivot out of the appliance with the top edge exiting first.
- Set the screen assembly to one side in a safe location.
- **CAUTION:** The inner screen assembly contains a glass panel and may require 2 people to remove it safely.

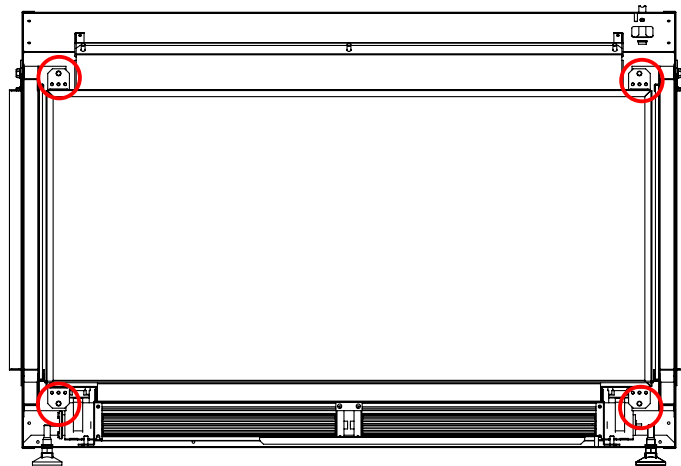

SERVICING INSTRUCTIONS

17. REMOVING THE HEATER ASSEMBLY

Then fan heater assembly is attached to the base of the inner unit. Follow the steps on page 17 to remove the complete unit from the stove body. Once it is removed from the body of the stove access can then be gained to the securing screws. Remove these screws and release the cable from the main unit.



MENDIP STOVES

Unit H1

Mendip Industrial Estate

Mendip Road

Rooksbridge

Somerset

BS26 2UG

Tel. : +44 (0) **1934 750500**

Web : www.mendipstoves.co.uk

Email : info@eurostove.co.uk



Mendip stoves: Woodland Electric manual May 2021. V1
M10515-49-00-99-00